

SRU 520/86

GB	Instructions for use	4
-----------	----------------------	---

F	Mode d'emploi	11
----------	---------------	----

D	Bedienungsanleitung	18
----------	---------------------	----

NL	Gebruiksaanwijzing	25
-----------	--------------------	----

DK	Vejledning	32
-----------	------------	----


S	Bruksanvisning	39
----------	----------------	----

N	Bruksanvisning	46
----------	----------------	----

FIN	Käyttöohje	53
------------	------------	----

Quick, Clean & Easy Setup
www.philips.com/urc

**PHILIPS**

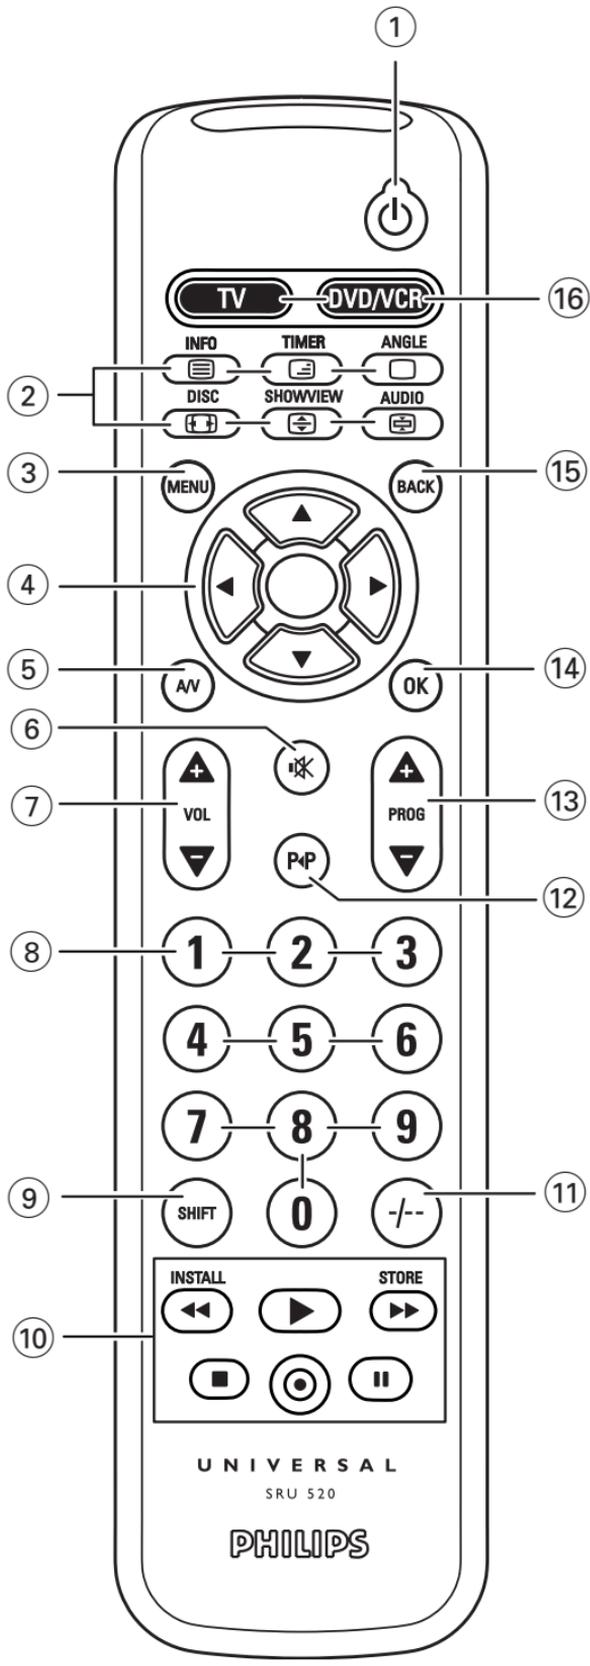

Instructions for use

English

Contents

1. Introduction	4
2. Installing the remote control	4-6
Inserting the batteries	4
Testing the remote control	4
Setting the remote control	5
3. Keys and functions	7
4. Extra possibilities	8-9
Adjusting device selection (Mode keys)	8
Adding a function to the remote control	8
Restoring the original functions of your remote control	9
5. Troubleshooting	9
6. Need help?	10
Code list of all brands / equipment	60-73


1. Introduction

Congratulations on your purchase of the Philips SRU520 universal remote control. After installing the remote control you can operate a maximum of 2 different devices with it: TV and VCR/DVD players/recorders. You can find information about how to prepare this remote control for use in the chapter 'Installing the remote control'.

2. Installing the remote control

Inserting the batteries

- 1 Press the cover inwards and slide it in the direction of the arrow.
- 2 Place two AAA type batteries into the battery compartment, as shown.
- 3 Slide the cover back and click it firmly into place.

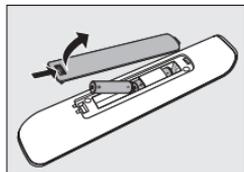

Note: If the mode keys (TV and DVD/VCR) blink four times after every key press, the remote control is indicating that its batteries are running low. Replace the old batteries with two new AAA batteries.

Testing the remote control

The remote control has been programmed to operate most Philips devices. Because the SRU520 may use different signals for each brand and even for different models of the same brand, it is advisable to test whether your device responds to the SRU520. The example below (TV) instructs you how to do this. You can repeat the same steps for other devices (VCR/DVD players/recorders) which you want to operate using the SRU520.

Example of TV:

- 1 Turn your TV on manually or use the original remote control. Tune to channel 1.
- 2 Press the TV key to select TV. Press the key until it lights up.
 - If the key does not light up, check whether the batteries are properly inserted (see 'Inserting the batteries').



Instructions for use

English

- 3** Check whether all the keys are working. For an overview of the keys and their functions see '3. Keys and functions'.
- If the TV responds as it should to all of the key commands the SRU520 is ready for use.



- **If the device does not respond at all or not to all of the key commands, follow the instructions under 'Setting the remote control', or for online setup go to: www.philips.com/urc.**

Setting the remote control

This is only necessary if your device does not respond to the SRU520.

If that is the case, the SRU520 does not recognize the brand and/or model of your device and you need to program the remote control to do so.

The example below (TV) instructs you how to do this. You can repeat the same steps for other devices (VCR/DVD players/recorders) which you want to operate using the SRU520.

You can set the remote control either automatically or manually.

Automatically setting the remote control

The remote control will now automatically search for the right code for your device.

Example of TV:

- 1** Make sure the TV is switched on and select a channel using the original remote control or the keys on the TV (for example channel 1). The SRU520 emits the 'switch off TV' signal for all models of TV that are stored in the memory.
 - If the device is a DVD-player or video recorder, insert a disk or tape and start playback.
- 2** Press the TV key to select TV. Press the key until it lights up.
- 3** Then keep keys 1 and 3 on the SRU520 **pressed simultaneously for three seconds**, until the key flashes twice and then remains lit.
- 4** Press and hold the Standby key of the SRU520.
 - The SRU520 now starts emitting all known 'TV off' signals, one by one. Each time a code is sent, the TV key lights up.



Instructions for use

- 5** When your TV switches off (stand-by), release the Standby key of the SRU520 immediately.
 - The SRU520 has now found a code that works on your TV.
- 6** Check if you can operate all functions on your TV with the SRU520.
 - **If this is not the case, you can redo the automatic setting. The SRU520 will then search for a code that works better.**
 - After the SRU520 has run through all the known codes, the search will stop automatically and the TV button stops flashing.
 - Automatic programming of a TV takes a maximum of 5 minutes. For VCR/DVD this time is 2 minutes.

Manually setting the remote control

Example of TV:

- 1** Turn on the TV manually or use the original remote control. Tune in to channel 1.
- 2** Look up the brand of your TV in the code list at the back of this manual. One or more four-figure codes are shown for each brand. Note the first code.
Be careful! There are separate tables for TV, VCR and DVD.



On our website www.philips.com/lurc you can directly select your device typenumber to find the right code.

Make sure you use the codes from the correct table.

- 3** Press the TV key to select TV. Press the key until it lights up.
- 4** Keep keys 1 and 3 **pressed simultaneously for three seconds** until the TV key flashes twice and then remains lit.



- 5** Then enter the code noted in step 2 using the digit keys.
 - The TV key will now flash twice.
 - If the key flashes once for an extended period, the code has not been entered properly or the wrong code has been entered. Start again from step 2.
 - 6** Point the SRU520 at the TV and check that it responds as it should.
 - If the TV responds to all of the key commands, the SRU520 is ready for use. Do not forget to note your code.
- **If the device does not respond at all, or not to all of the key commands, start again from step 2 and try the next code from the list.**

3. Keys and functions

The illustration on page 3 gives an overview of all keys and their functions.

- ①  **Standby** switches TV, VCR or DVD on or off.
- ②    . . . - teletext on/off ();
   . . . - text mix ();
 . . . - text off ();
 . . . - wide screen TV ();
 . . . - enlarge ();
 . . . - text hold ().
- ③ **MENU** turns the menu on and off.
- ④ **Cursor keys** cursor up, down, left, right in a menu.
- ⑤ **A/V** switches between external inputs of your equipment.
- ⑥  mutes the sound of the TV.
- ⑦ **-VOL +** adjusts the TV volume.
- ⑧ **Digit keys** direct choice of channels and other functions.
- ⑨ **SHIFT** for extra functions. When pressed at the same time as a second key, the second key will get another function. All blue labelled keys can be used together with SHIFT. For example:

SHIFT + INSTALL installs your TV

SHIFT + STORE . . stores TV settings

Try out other combinations with the SHIFT-key on your device in order to find out which functions are available.

Only functions featured on the original remote control are available.

- ⑩  - red teletext key
 - rewind (VCR/DVD)
 - index
 - play (VCR/DVD)
 - blue teletext key
 - wind (VCR/DVD)
 - green teletext key
 - stop (VCR/DVD)
 record
 - yellow teletext key
 - pause (VCR/DVD)
- ⑪  selects between one- and two-figure channel numbers.
- ⑫ **PP** selects previous programme/channel.
- ⑬ **- PROG +** selects a previous or following channel.
- ⑭ **OK** confirms your selection.
- ⑮ **BACK** jumps back one level in the menu or turns off the menu.
- ⑯ **TV - DVD/VCR** selects TV or DVD/VCR mode.

If you use the () 'memory off' key to get to the next teletext page on your Philips TV, you can press the STOP key for this. See also 'Troubleshooting'.

- **If the device does not respond at all, or not to all of the key commands, follow the instructions under 'Setting the remote control'. It is possible that you must enter another code for the device.**

Instructions for use

English

4. Extra possibilities

Adjusting device selection (Mode keys)

The SRU520 is default set for operating TV, VCR or DVD. You can select the device you wish to operate with TV and DVD/VCR selection buttons. Each key allows operation of one device only. If desired, you can program the keys to select a different kind of device.

For example, if you want to operate a second TV.

In the following example you will see how to configure the DVD/VCR key for a second TV.

- 1 Switch on the second TV.
- 2 Press the DVD/VCR key to select DVD/VCR. Press the key until it lights up.



- 3 Then keep keys 1 and 6 on the SRU520 pressed **simultaneously for three seconds**, until the DVD/VCR key lights up.



- 4 Press keys 9, 9 and 2, in that order.



- 5 Press the TV key to select TV. Press the key until it lights up.



- 6 Press the 1 key.
 - The DVD/VCR key flashes twice.
 - The DVD/VCR key will now allow you to operate your second TV.



- 7 Program the SRU520 to operate the second TV.
See 'Setting the remote control'.

Adding a function to the remote control

If you want to add a function to the SRU520, you can contact the Philips service line for Universal Remote Control to ask for the 5-figure code for the extra function.

Restoring the original functions of your remote control

- 1** Keep keys 1 and 6 on the SRU520 pressed **simultaneously for three seconds**, until the mode key (TV or DVD/VCR) flashes twice and then remains lit.



- 2** Press keys 9, 8 and 1 in that order:
- The mode key (TV or DVD/VCR) key flashes twice. All original functions have now been restored and any extra functions have been deleted.



5. Troubleshooting

- Problem
- Solution
- The mode keys (TV and DVD/VCR) blink four times after every key press.
- The remote control is indicating that its batteries are running low. Replace the old batteries with two new 1.5 Volt, AAA batteries.
- The device you want to operate does not respond and the mode key (TV or DVD/VCR) does not flash when you press a key.
- *Replace the old batteries with two new 1.5 Volt, AAA batteries.*
- The device you want to operate does not respond but the mode key (TV or DVD/VCR) does flash when a key is pressed.
- *Point the SRU520 at the device and make sure that there are no obstructions between the SRU520 and the device.*
- The SRU520 does not respond properly to commands.
- *Maybe you are using the wrong code. Try programming the SRU520 again using another code, which is mentioned under the brand of your device, or reset for automatic search to find the right code. If the device still does not respond, call our helpline.*
- The Teletext keys do not work.
- *Find out whether your TV is equipped with Teletext.*
- You have difficulties operating all of the functions on your device.
- *Maybe the SRU520 has to be adapted to the model of the device. Call our helpline for details.*
- Your brand of device is not in the code list.
- *Try to set the SRU520 automatically. See 'Automatically setting the remote control'.*
- None of the codes works during manual setting of the remote control.
- *If that is the case, follow the instructions under 'Automatically setting the remote control'.*

Instructions for use

English

6. Need help?

If you have any questions about the SRU520, you can always contact us. You will find our contact details after the code list at the back of this manual. Read this manual carefully before you make a call. You can solve most of the problems yourself. If you cannot find any answers to your problems, write down the details of your device shown in the code list at the back of this manual. This will help our operators to assist you better and more quickly. Look up the numbers of the models in the instructions accompanying the device or on the back of your device. When you call our helpline, make sure the device is to hand so that our operators can help you determine whether your remote control is working properly.

The model number of your Philips universal remote control is SRU520/86.

Date of purchase:/...../.....
(day/month/year)

Codes

TV

SETUP CODES FOR TV

A.R.Systems	0482, 0401	Beko	0064, 07411064, 0513, 0742, 0633, 0397, 0445
Acura	0036	Beon	0064, 0445
Admiral	0190, 0114	Berthen	0695
Agef	0114	Best	0364
Aiko	0036	Bestar	0064, 0397, 0401
Aim	0064	Bestar-Daewoo	0401
Aiwa	0728	Black Diamond	1064
Akai	0583, 0064, 0575, 0741, 0742, 0633, 0388, 0036, 0190, 0398, 0099, 0507, 0378, 0500	Black Panther	0129
Akiba	0064, 0482, 0321, 0309	Black Star	0274
Akito	0064	Blacktron	0309
Akura	0064, 0741, 0695, 0036, 0386, 0309	Blackway	0309
Alba	0064, 0741, 06951064, 0514, 0063, 0274, 0445, 0262, 0398, 0036, 0190, 0382, 0458	Blaupunkt	0222, 0063, 0482, 0581, 0562
Allorgan	0321	Blue Sky	0583, 0064, 0741, 06951064, 0742, 0514, 0482, 0309
Allstar	0064	Blue Star	0309
Amplivision	0397, 0427	Bondstec	0274
Amstrad00641064, 0036, 0398, 0204		Boots	0036
Anam	0036	BPL	0064, 0309
Anglo	0036	Brandt	0652, 0587, 0595, 0136, 0362, 0314, 0528, 0264, 0426
Anitech	0064, 0036, 0309	Brandt Electronic	0595, 0528
Ansonic	0695, 0397, 0131, 0036, 0319	Brandt Electronique	0595, 0528
Apollo	0500	Brinkmann	0064, 0695, 0513, 0445
Arc En Ciel	0426, 0136, 0595, 0528	Brionvega	0114
Ardem	0064, 0741	Bruns	0114
Aristona	0583, 0064	BSR	0321, 0190
Arthur Martin	0190, 0427, 0264	Bush	0583, 0064, 0741, 06951064, 0725, 0514, 0388, 0063, 0262, 0376, 0398, 0321, 0309, 0382, 0036, 0401
ASA	0114, 0131	Carad	06951064, 0637
Asberg	0064, 0129	Carena	0064, 0482
Asora	0036	Carrefour	0063
Atlantic	0064, 0286	Cascade	0064, 0036
Atori	0036	Casio	0064
Auchan	0427, 0190	Cathay	0064
Audiosonic	0064, 0741, 0513, 0742, 0397, 0036, 0364, 0136, 0401	CCE	0064
Audioton	0513, 0397	Centrum	1064
Autovox	0114, 0274, 0264	Centurion	0064
Awa	0633, 0063, 0135, 0036, 0038	Century	0114, 0274, 0265
Axent	0036	CGE	0397, 0274, 0445
Baird	0099	Cimline	0036
Bang & Olufsen	0114, 0592	City	0036
Basic Line	0583, 0064, 06951064, 0482, 0401, 0036, 0366, 0309	Clarivox	0064
Baur	0064, 0388, 0581, 0376, 0562, 0539	Clatronic	0064, 0741, 0397, 0036, 0274, 0129, 0398
		Clayton	1064
		Concorde	0036
		Condor	0064, 0397, 0274, 0445, 0036, 0309
		Contec	0064, 0063, 0036
		Continental Edison	0514, 0426, 0595, 0314, 0528, 0264

Codes

TV

.....	0136	0136, 0362, 0314, 0265,
Cosmel.....	0064, 0364, 0036	0388, 0135, 0131, 0583
Crosley.....	0114, 0374, 0274	Fidelity.....	0064, 0388, 0398, 0190,
Crown.....	0064, 0741, 0513, 0742,	0539
.....	0514, 0633, 0397, 0036,	Finlandia.....	0575, 0373, 0190, 0099,
.....	0386, 0366, 0445	0386
Crystal.....	0458	Finlux.....	0064, 0741, 0742, 0131
CS Electronics.....	0274	0374, 0519, 0129, 0373
CTC.....	0274	0507, 0114, 0132, 0500
D-Vision.....	0583, 0064	0099
Daewoo.....	0583, 0064, 06611936,	Firstline.....	0583, 0064, 0741, 06951064,
.....	0036, 04011164	0388, 0265, 0376, 0036,
Dansai.....	0064, 0063, 0036	0262, 0321, 0401, 0099
Dantax.....	0741, 0742	0274
Dawa.....	0064	Fisher.....	0397, 0063, 0131, 0114,
Dayton.....	0036	0099
Daytron.....	0064, 0036, 0401	Flint.....	0064, 0637, 0482, 0099
De Graaf.....	0575	Formenti.....	0064, 0114, 0374
Decca.....	0064, 0099	Fortress.....	0114
Denver.....	0064	Fraba.....	0064, 0397
Desmet.....	0064, 0036, 0114	Friac.....	0064, 0637, 0397, 0129,
Diamant.....	0064	0036
Digatron.....	0064	Frontech.....	0036, 0458, 0274, 0190,
Digiline.....	0695, 0132	Fujitsu.....	0036, 0286, 0099
Dixi.....	0064, 0036, 0114	Fujitsu General.....	0036
Domeos.....	0695	Funai.....	0695, 0321
DTS.....	0036	Galaxi.....	0064
Dual.....	00641164, 0379, 0286	Galaxis.....	0064, 0397
Dumont.....	0374, 0129, 0114	GBC.....	0401, 0036
Dux.....	0064	GE.....	0652, 0309
Dynatron.....	0064	Geant Casino.....	0427
Edison-Minerva.....	0514	GEC.....	0064, 0388, 0190, 0099
Elbe.....	0637, 0462, 0319, 0286	Geloso.....	0401, 0374, 0036
.....	0265	General Technic.....	0036
Elekta.....	0309	Genesis.....	0036
ELG.....	0064	Genexxa.....	0064, 0036, 0190
Elin.....	0064, 0575, 0388, 0131	Goldfunk.....	0695
.....	0036, 0376	GoldStar.....	0064, 0741, 0742, 0633,
Elman.....	0129	0388, 0274, 0458, 0190,
Elta.....	0458, 0036	0317, 0136
Emco.....	0274	Gooding.....	0514
Emerson.....	0064, 07411936, 0513,	Goodmans.....	0583, 0064, 0741, 0587,
.....	0388, 0397, 0204, 0114,	0695, 066119361064, 0514,
.....	0309, 0398, 0274	0063, 0398, 0362, 0507,
Emperor.....	0309	0262, 0401, 0036, 0099
Erres.....	0064	Gorenje.....	0397
ESC.....	0064	Graetz.....	0514, 0388, 0366, 0398,
Etron.....	0190, 0036	0190, 0374
Euroman.....	0064, 0397	Granada.....	0064, 0575, 0587, 0135,
Europa.....	0064	0253, 0366, 0386, 0099,
Europhon.....	0129, 0458	0383, 0500, 0190, 0378,
Expert.....	0427, 0286, 0190	0427
Exquisit.....	0064, 0274	Grandin.....	0064, 0741, 06951064, 0742,
Fenner.....	0036, 0401	0637, 0482, 0190, 0401
Ferguson.....	0064, 0652, 0575, 0587,	0036, 0309

TV

CODELIST

Codes

TV

TV

Grundig.....0583, 0064, 0222, 0514,0063, 0614, 0264, 0581,0036, 05620036, 0274, 0129, 0458, 0309 IR.....0583, 0064, 0222, 0388,0397, 0063, 0135, 0252,0253, 0264, 0386, 0314,0401, 0321, 0562, 01140262, 0383, 0132, 0274,0038, 0190, 0319, 0539,0099, 0378, 0131, 0265,0136, 0317, 0528, 0376,0581, 0129
Haier.....0725	Irradio.....0064, 0398, 0036, 0317,0274
Hanimex.....0321	Isukai.....0064, 0482, 0309
Hanseatic.....0583, 0064, 0741, 0661,0388, 0309, 0458, 0114,0321, 0036	ITS.....0064, 0398, 0309
Hantarex.....0064, 0036, 0265, 0129	ITT.....0575, 0637, 0388, 0500,0190, 0374, 0373, 0378,0507, 0366, 0376
Hantor.....0064	ITT Nokia.....0575, 0637, 0633, 0388,0507, 0373, 0378, 0500,0366, 0376, 0458, 0190,0374
Harwood.....0064, 0514, 0036	ITV.....0064, 0401, 0274
Hauppauge.....0064	Jean.....0063
HCM.....0064, 0036, 0445, 0309	JMB.....0583, 0661
Hema.....0036	Jubilee.....0583
Hemmermann.....0376	JVC.....0633, 0063, 0680, 0445,0398
Hifivox.....0426, 0136, 0595, 0528	Kaisui.....0064, 0482, 0036, 0309
Highline.....0064	Kapsch.....0388, 0190, 0131
Hinari.....0064, 0063, 0036, 0262,0382, 0321	Karcher.....0741, 0637, 0309
Hisawa.....0741, 0637, 0482, 0309,0427	Kathrein.....0583
Hisense.....0535	Kawa.....0398
Hit.....0114	KB Aristocrat.....0190, 0374
Hitachi.....0064, 0575, 0661, 0641, 1164,0063, 0135, 0252, 0383,0132, 0519, 0190, 0376,0099, 0507, 0136, 0374, 1252,0500	Kendo.....0064, 0637, 0129, 0321,0274, 0262
Hitachi Fujian.....0135	Kennedy.....0462, 0190
Hitsu.....0637, 0482, 0036	Kiton.....0064, 0695
HMV.....0114	Kneissel.....0583, 0064, 0637, 0265,0401, 0319, 0286, 0462
Home Electronics.....0633	Kolster.....0129, 0376, 0274
Hornophon.....0064	Konka.....0064, 0741, 0614, 0445,0398
Hoshai.....0309	Kontakt.....0514
Huanyu.....0401	Korpel.....0064
Hyper.....0274, 0036	Korting.....0114
Hypson 0064, 0741, 0695, 1064, 0742,0482, 0309, 0427	Koyoda.....0036
H'her.....0741	Kraking.....0265
Iberia.....0064	Kuba.....0376
ICE.....0398	Kyoshu.....0445
Imperial.....0064, 0397, 0445, 02740458	Kyoto.....0190
Indesit.....0264	L&S Electronic.....0741
Indiana.....0064	LaSAT.....0513
Ingelen.....0741, 0637, 0514, 0190	Leader.....0036
Ingersoll.....0036	Lecson.....0064
Inno Hit.....0099, 0309, 0036, 0274,0129, 0317	Lenco.....0064, 0401
Interbuy.....0064, 0274	
Interfunk.....0064, 0388, 0539, 0274,0528, 0190, 0595, 01140376	
Internal.....0064	
Intervision.....0064, 0513, 0514, 0482,	

CODELIST

Codes

TV

Lenoir.....	0036	Minato.....	0064
Lesa.....	0274	Minerva.....	0514, 0135, 0264, 0581,0562
Leyco.....	0064, 0321, 0099	Minoka.....	0064, 0386
LG.....	0274, 0317, 0741, 0742,0725, 0136, 0583, 0064,0458, 0190	Mitsubishi.....	1064, 0063, 0135, 0114,0539, 0264, 0562, 0583,0064
Liesen & Tter.....	0064	Mivar.....	0317, 0636, 0319, 0397
Liesenkotter.....	0064	Monaco.....	0036
Lifetec.....	0064, 0741, 069510641164,0401, 0036	Morgan's.....	0064
Lloyd's.....	0036	MTC.....	0397, 0376, 0539
LME.....	0458	MTlogic.....	0741
Loewe.....	0397, 0064, 0539, 0319,0114	Multistandard.....	0129
Logik.....	0398, 0038	Multitec.....	0064, 06951064, 0513
Logix.....	0695	Multitech.....	0064, 0513, 0274, 0129,0036
Luma.....	0286	Murphy.....	0190
Lumatron.....	0064, 0286, 0190	Musikland.....	0274
Lux May.....	0064, 0036	Myryad.....	0583
Luxor.....	05751064, 0388, 0507, 0190,0376, 0500, 0317, 0264, 0383	NAD.....	0388
M electronic.....	0064, 0741, 0661, 0131,0274, 0401, 0539, 0190,0190, 0376, 0036, 0519,0132, 0373, 0507	Naiko.....	0064, 0633
Madison.....	0064	NAT.....	0253
Magnadyne.....	0374, 0274, 0129, 0114	National.....	0253, 0264, 0267
Magnafoon.....	0129	NEC.....	0063, 0482, 0038, 0036,04011731
Magnavox.....	0063, 0038	Neckermann.....	0583, 0064, 0397, 0274,0445, 0114, 0376, 0581
Magnum.....	0064, 0741, 0742	NEI.....	0064, 0458, 0398, 0364
Manesth.....	0064, 0321, 0262	Nesco.....	0274
Manhattan.....	0064, 06951064	Netsat.....	0064
Marantz.....	0583, 0064, 0883	Network.....	0364
Marelli.....	0114	Neufunk.....	0583, 0064, 0741, 0637,0036
Mark.....	0064, 0741, 0742, 0036,0401	New Tech.....	0583, 0064, 0036
Masuda.....	0036	Nikkai.....	0064, 0063, 0364, 0036, 0099
Matsui.....	0583, 0064, 0741, 02221064,0514, 0063, 04820190, 0262, 0038, 0382,0099, 0036, 0362, 04580204, 0321, 0398	Noblisko.....	0129
Mediator.....	0064	Nogomatic.....	0136, 0595, 0528, 0426
Medion.....	0741, 06951064, 07251164,0539, 0583, 0064	Nokia.....	0575, 0637, 0633, 0388,0386, 0500, 0373, 0378,0401, 0366, 0376, 0190,0507, 0374
Megas.....	0637	Nordmende.....	0064, 0741, 0587, 0222,0528, 0136, 0426, 0595,0314
MEI.....	1064	Normerel.....	0064
Melvox.....	0427	Novatronic.....	0064, 0401, 0132
Memorex.....	1064, 0036	Oceanic.....	0575, 0388, 0374, 0500,0190, 0427
Memphis.....	0364	Okano.....	0064, 0397, 0036
Mercury.....	0064, 0036	Onimax.....	0741
Metronic.....	0652	Onwa.....	0398, 0129
Metz.....	0064, 0695, 0614, 0114,0562, 0474, 0394, 0581	Opera.....	0064
Micromaxx.....	0064, 06951064	Orbit.....	0064
		Orion.....	0741, 0129, 0321, 0262, 0038,0204, 0382, 0583, 0064

TV

CODELIST

Codes

TV

TV

Orline.....	0064	0445, 0364, 0036, 0274,
Ormond.....	06951064	0458, 0129
Osaki.....	0401, 0382, 0099, 0583,	ProVision.....	0583, 0064, 0741
.....	0064	Pye.....	0583, 0064, 0376, 0114,
Osio.....	0064, 0317	0581, 0401
Osume.....	0064, 0063, 0099	Pymi.....	0036
Otto Versand.....	0388, 0063, 0253,	Quadra Vision.....	0427
.....	0374, 0539, 0321, 0136,	Quasar.....	0274, 0036
.....	0581, 0274, 0376, 0562,	Quelle.....	0064, 0695, 0388, 0131,
.....	0262, 0583, 0064	0562, 0539, 0038, 0581
Pacific.....	0583, 074110641164	Questa.....	0063
Palladium.....	0064, 0741, 03971164,	R-Line.....	0064
.....	0376, 0274, 0445	Radialva.....	0458, 0364
Palsonic.....	0064, 0725, 0445	Radiola.....	0583, 0064
Panama.....	0064, 0274	Radiomarelli.....	0064, 0114
Panasonic.....	0677, 0575, 0388, 0064,	RadioShack.....	0064
.....	0253, 0267, 0264, 0378,	Radiotone.....	0064, 06951064, 0036
.....	0374, 0394, 0190	Rank Arena.....	0063
Panavision.....	0064	RCA.....	0652
Pathe Cinema.....	0427, 0265, 0190,	Recor.....	0064
.....	0458	Rectiligne.....	0064
Pathe Marconi.....	0426, 0264, 0595,	Rediffusion.....	0575, 0388, 0063, 0378,
.....	0528	0373
Pausa.....	0036	Reflex.....	0064, 06951064
Perdio.....	0064, 0309, 0190, 0099	Reoc.....	0741
Perfekt.....	0064	Revox.....	0064
Pershin.....	0427	Rex.....	0286, 0190
Philco.....	0064, 0397, 0445, 0274,	RFT.....	0064, 0114, 0099
.....	0114	Roadstar.....	0064, 06951064, 0309,
Philex.....	0378	0036, 0445
Philips.....	0632, 0581, 0583, 0064,	Robotron.....	0114
.....	0388, 0359, 0036, 0265,	Rowa.....	0725
.....	0401, 0114	Royal Lux.....	0397, 0362
Phoenix.....	0064, 0513, 0114	Saba.....	0652, 0575, 0741, 0587,
Phonola.....	0064, 0114	0388, 0190, 0374, 0528,
Pioneer.....	0064, 0513, 0388, 0314,	0136, 0595, 0362, 0426,
.....	0539, 0190, 0136	0114, 0314
Pionier.....	0513, 0397, 0388, 0136,	Saccs.....	0265
.....	0064	Sagem.....	0637, 0482
Plantron.....	0064, 0036	Saisho.....	0204, 0038, 0458, 0036,
Playsonic.....	0064, 0741, 0742, 0366	0262
Policom.....	0595, 0528	Saivod.....	0064, 06951064
Poppy.....	0036	Sakan.....	0190
Portland.....	0401	Salora.....	0575, 0388, 0190, 0383,
Powerpoint.....	0064, 0514	0507, 0376, 0317, 0386
Prandoni-Prince.....	0388	Salsa.....	0362
Prinston.....	1064	Sambers.....	0129
Prinz.....	0388, 0099, 0376	Samsung.....	0397, 0614, 0036, 0190,
Profex.....	0388, 0036, 0190	0839, 0729, 0671, 0099,
Profi.....	0036	0317, 0583, 0064
Profitronic.....	0064, 0129	Sansui.....	0064
Proline.....	0064, 0652, 0661, 0099	Santon.....	0036
Prosonic.....	0064, 0741, 0695, 0397,	Sanyo.....	0397, 0063, 0135, 0099,
.....	0401, 0398	0366, 0038, 0131
Protech.....	0064, 06951064, 0513,	SBR.....	0583, 0064

CODELIST

Codes

TV

Schaub Lorenz.....0575, 0741, 0513,0633, 0388, 0401, 0374	Starlite.....0064, 0036
Schneider.....0741, 06951064,03881164, 0274, 0379, 0190,0376, 0398, 0286, 0583,0064	Stenway.....0309
Scotland.....0190	Stern.....0286, 0190
Seaway.....0661	Strato.....0064, 0036
Seelver.....1064	Sunkai.....0637, 0514, 0482, 0382,0321
SEG.....0064, 0695, 06611064, 0063,0036, 0129, 0376	Sunstar.....0064, 0036, 0398
SEI.....0064, 0129, 0321, 0114,0204, 0376, 0190, 0374	Sunwood.....0064
Sei-Sinudyne.0064, 0114, 0374, 0321,0129	SuperTech.....0583, 0064, 0036
Seleco.....0373, 0462, 0286, 0398,0190, 0374	Supra.....0036
Sencora.....0036	Susumu.....0362, 0314
Serino.....0637, 0482	Sutron.....0036
Sharp.....00631220, 0321, 0384	SVA.....0614
Shintoshi.....0064	Swissline.....0274
Shivaki.....0064	Sysline.....0064
Shorai.....0321	T+A.....0474
Siarem.....0129, 0114, 0374	Tandberg.....0394
Siemens.....0064, 0222, 0581, 0562,0374	Tandy.....0099, 0190
Siesta.....0397	Targa.....0729
Silva.....0064, 0388	Tashiko.....0063, 0190, 0386
Silva Schneider.....0064	Tatung.....0064, 0038, 0099
Silver.....0742, 0388, 0063	TCM.....0741
Singer.....0064, 0129, 0114, 0462,0362, 0036	Teac.....0064, 0695, 0725, 0482,0036, 0458, 0376, 0539
Sinudyne.....0064, 0388, 0204, 0374,0190, 0321, 0129, 0262,0376, 0114	Tec.....0064, 0286, 0274, 0364,0036
Skantic.....0383	Tech Line.....0064, 0695
SKY.....0064	Technics.....0583, 0677
SLX.....0695	TechniSat.....0583
Smaragd.....0514	Tecnimagen.....0583
Solavox.....0064, 0575, 0388, 0378,0190, 0099	Tedalex.....0458, 0036
Soniko.....0064	Teleavia.....0426, 0595, 0528, 0517
Sonitron.....0397, 0366	Telecor.....0064, 0286, 0190
Sonneclair.....0064	Telefunken.....0064, 0652, 0587, 0513,0362, 0517, 0595, 0314,0136, 0373, 0528
Sonoko.....0064, 0036, 0309	Telefusion.....0064
Sonolor.....0575, 0388, 0427, 0190,0374, 0309	Telegazi.....0064, 0190, 0286
Sontec.....0064, 0397, 0036, 0321	Telesonic.....0064
Sony.....00641532, 00631037, 0038,01291678	Telestarc.....0583, 0064
Sound & Vision.....0129, 0401	Teletech.....0064, 06951064, 0274,0036, 0364
Soundwave.....0064, 0742, 0445	Teleton.....0063, 0376, 0286
Spectra.....0036	Televideon.....0190
Ssangyong.....0036	Television.....0064
Standard.....00641064, 0036, 0401	Televiso.....0427
	Temco.....0321
	Tempest.....0036
	Tennessee.....0064
	Tensai.....0064, 0742, 0274,0401, 0036, 0132, 0398,0131, 0321
	Tenson.....0036
	Tevion.....0064, 0741, 069510641164
	Textet.....0401, 0036

TV

CODELIST

Codes

TV

TV

Thomson.....0652, 0587, 0517, 0595,0314, 0426, 0264, 1474, 0376,0528, 0136, 0362, 0064	Yamishi.....0064, 0482, 0309
Thorn.....0064, 0388, 0063, 0136,0386, 0562, 0131, 0362,0539, 0099, 0265	Yokan.....0064
Thorn-Ferguson.....0265	Yoko.....0064, 0458, 0036, 0366,0274
Tokai.....0064, 06951064, 0099, 0401,0364, 0036, 0190	Zanela.....0265
Tokaido.....1064	Zenor.....0366
Tomashi.....0309	
Toshiba.....0741, 0222, 0063, 0677,0535, 01361535, 0129, 0517	
Toyoda.....0036	
Trans Continens.....0064, 06951064	
Transonic.....0064, 0614, 0036	
Triumph.....0583, 0204, 0373	
Tsoschi.....0309	
TVTEXT.....0095, 0583	
Uher.....0064, 0513, 0401, 0507,0445	
Ultravox.....0064, 0274, 0129, 0114,0378	
Unic Linie.....0064, 0482	
United.....0064, 0741, 0742	
Universal.....0064	
Universum.....0064, 06951064, 0388,0397, 0063, 0519, 03210562, 0132, 0507, 0317,0539, 0038, 0131, 05000274, 0528, 0036, 0373,0581, 0445, 0204	
Univox.....0064, 0364, 0190, 0114	
Vestel.....0583, 0064, 06951064	
Vexa.....0064, 0036	
Videosat.....0274	
VideoSystem.....0064	
Videoton.....0383	
Vision.....0064	
Vortec.....0064	
Voxson.....0190, 0114, 0445	
Waltham.....0064, 06951064, 0190,0458, 0136, 0445, 0383,0517	
Watson.....0064, 06951064, 0190, 0036	
Watt Radio.....0129	
Wega.....0064, 0063, 0114	
Wharfedale.....0583, 0064	
White Westinghouse.....0364, 0064	
Windsor.....06951064	
Windstar.....0364, 0309	
Windy Sam.....0583	
Xenius.....0661	
Xrypton.....0064	
Yamaha.....0677	

CODELIST

SETUP CODES FOR VCR

Accent.....	0099	Combitech.....	0379
Adyson.....	0099	Condor.....	0305
Aiwa.....	0064, 0375, 0027, 0334,	Craig.....	0064, 0099, 0267, 0074
.....	0379	Crown.....	0305, 0064, 0099
Akai.....	0375, 0379, 0342, 0133,	Curtis Mathes.....	1062
.....	0068, 0267	Cyrus.....	0108
Akiba.....	0099	Daewoo.....	0305, 0379, 0072, 0073
Akitan.....	0322	Dansai.....	0305, 0099
Akura.....	0099	Dantax.....	0379
Alba.....	0108, 0305, 0375, 0027,	De Graaf.....	0108, 0131, 0075, 0069,
.....	0099, 0379, 0342, 0322	0073
Allorgan.....	0267	Decca.....	0108, 0027, 0379, 0094,
Allstar.....	0108	0068
America Action.....	0305	Deitron.....	0305
Amstrad.....	0305, 0027, 0099	Denko.....	0099
Anam.....	0064, 0253, 0267	Denon.....	0069
Anam National.....	02531189	Diamant.....	0064
Anitech.....	0099	Dual.....	0108, 0305, 0375, 0027,
Ansonic.....	0027	0068
Aristona.....	0108, 0173	Dumont.....	0108, 0027, 0131
ASA.....	0108, 0064	Elbe.....	0305, 0065
Asuka.....	0064, 0065	Elcotech.....	0099
Audiosonic.....	0305	Elin.....	0267
AVP.....	0027, 0379	Elsay.....	0099
Awa.....	0070	Elta.....	0305, 0099
Baird.....	0027, 0131, 0133, 0068	Emerson.....	0305, 0064, 0027, 0099,
Basic Line.....	0305, 0099, 0131, 0073	0072, 0070, 0235
Beko.....	0131	ESC.....	0305, 0267
Bell & Howell.....	0131	Etzuko.....	0099
Bestar.....	0305	Ferguson.....	0305, 0027, 0347, 0068,
Black Panther.....	0305, 0305	0348
Blaupunkt.....	0108, 0253, 0430, 0222	Fidelity.....	0027, 0099, 0379, 0459,
Blue Sky.....	0305, 0064, 0375, 0099,	0267
0379		Finlandia.....	0108, 0064, 0027, 0411,
Bondstec.....	0099	0131, 0075, 0070, 0069,
Brandt.....	0347, 0214, 0348, 0068,	0133, 0253, 0073
.....	0233	Finlux.....	0108, 0027, 0131, 0069
Brandt Electronic.....	0068	Firstline.....	0305, 0064, 0375, 0099,
Brandt Electronique.....	0068	0072, 0070
Brinkmann.....	0375	Fisher.....	0131, 0074, 0073
Broksonic.....	0322	Flint.....	0375
Bush.....	0108, 0305, 0375, 0027,	Frontech.....	0099
.....	0099, 0379, 0342	Funai.....	0027
Carena.....	0108	Galaxi.....	0027
Carrefour.....	0072	Galaxis.....	0305
Carver.....	0108	Garrard.....	0027
Casio.....	0027	GE.....	0347, 0075, 02671062
Cathay.....	0305	GEC.....	0108
CGE.....	0027, 0068	General Technic.....	0375
Cimline.....	0099	Genexxa.....	0131
Citizen.....	0305, 0064	Go Video.....	0459
Clatronic.....	0027, 0099	GoldHand.....	0099
Colt.....	0099	GoldStar.....	0064, 0252
		Goodmans.....	0108, 0305, 0064, 0375,
		0027, 0099, 0379, 0430

Codes

VCR

GPX.....	0064	Kimari.....	0074
Gradiente.....	0027	Kneissel.....	0305, 0064, 0375, 0379
Graetz.....	0131, 0068, 0267	Korpel.....	0099
Granada.....	0108, 0064, 0027, 0131, 0075, 0069, 0253, 0267,	Kuba.....	0074
Grandin.....	0305, 0064, 0027, 0099	Kuba Electronic.....	0074
Grundig.....	0108, 0375, 0099, 0347,	Kuwa.....	0253
.....	0379, 0253, 0374, 0430,	Kyoto.....	0099
.....	0222	Lenco.....	0305
Hanimex.....	0379, 0322	Leyco.....	0099
Hanseatic.....	0108, 0064, 0065	LG.....	0064
Harley Davidson.....	0027	Lifetec.....	0375
Harman/Kardon.....	0065	Lloyd's.....	0027
Harwood.....	0099	Loewe.....	0108, 0064
HCM.....	0099	Logik.....	0099, 0133, 0267
Hinari.....	0305, 0099, 0379, 0068,	Lux May.....	0099
.....	0267, 0235	Luxor.....	0131, 0075, 0070, 0342,
Hisawa.....	0379	0133, 0073, 0074
Hischito.....	0072	LXI.....	0064
Hitachi.....	0108, 0027, 0069, 0430,	M Electronic.....	0027, 0065
.....	0267, 0068, 0073	Magnasonic.....	0305
Hornophon.....	0108	Magnavox.....	0108, 0027, 0430
Hughes Network Syst.....	0069	Magnin.....	0267
Hypson.....	0305, 0064, 0027,	Manesth.....	0108, 0099, 0072
.....	0099, 0379	Marantz.....	0108, 0322, 0173, 0065
H'er.....	0305	Mark.....	0305, 0027
Imperial.....	0027	Master's.....	0305
Ingersoll.....	0267	Matsui.....	0375, 0379, 0322, 0267,
Inno Hit.....	0099	0235
Interbuy.....	0064, 0099	Matsushita.....	1189
Interfunk.....	0108, 0131	Mediator.....	0108
Internal.....	0305	Medion.....	0375, 0379
International.....	0305, 0064	Melectronic.....	0064, 0027, 0065
Intervision.....	0305, 0027	Memorex.....	0064, 0375, 0027, 0131,
IR.....	0108, 0375, 0099, 0131,	00751189, 0073, 0267
.....	0072, 0069, 0133, 0253,	Memphis.....	0099
.....	0235, 0322, 0214, 0267,	Metronic.....	0108
.....	0068, 0074	Metz.....	0108, 0064, 0253, 0374,
Irradio.....	0108, 0064, 0099	02221189
ITT.....	0411, 0131, 0133, 0073,	MGA.....	0070, 0267
.....	0267, 0068	Micormay.....	0375
ITV.....	0305, 0064	Migros.....	0027
JBL.....	0305	Minerva.....	0222
Jensen.....	0068	Minolta.....	0069
JMB.....	0375, 0379	Mitsubishi.....	0108, 0094, 0075, 0070
Joyce.....	0027	MTC.....	0027, 0267
JVC.....	0411, 0094, 0233, 0068	Multitec.....	0064
Kaisui.....	0099	Multitech.....	0027, 0099
Kambrook.....	0064	Murphy.....	0027
Karcher.....	0108, 0305	Myryad.....	0108
KEC.....	0305, 0064	NAD.....	0131
Kendo.....	0305, 0375, 0099, 0342,	National.....	0253
.....	0133	NEC.....	0305, 0064, 0131, 0094,
Kenwood.....	0094, 0068, 0065	0068, 0065
		Neckermann.....	0108
		Nesco.....	0027, 0099

VCR

CODELIST

Codes

VCR

Nikkai	0305, 0099	0074, 0073
Nikko	0064	Reoc	0375
Nokia	0108, 0305, 0131, 0075,	Rex	0411, 0068
.....	0069, 0342, 0133, 0267,	RFT	0099, 0430
.....	0068, 0073	Roadstar	0108, 0305, 0064, 0099,
Nordmende	0347, 0411, 0094, 0068,	0267
.....	0348	Royal	0099
Oceanic	0108, 0027, 0131, 0075,	Saba	0305, 0347, 0411, 0068,
.....	0133, 0073, 0068	0233, 0348, 0214
Okano	0305, 0375, 0099, 0342	Saisho	0375, 0235
Optimus	0064, 0131, 0075,	Salora	0131, 0070, 0133, 0073
.....	04591189	Samsung	0072, 0459, 0267
Orbit	0099	Sansei	0075
Orion	0375, 0379, 0322, 0235	Sansui	0027, 0099, 0094, 0133,
Orson	0027	0068
Osaki	0064, 0027, 0099	Sanyo	0131, 0094, 0075, 0267,
Osume	0099	0074, 0073
Otto Versand	0108	Saville	0305, 0379, 0267
Pace	0379	SBR	0108, 0173
Pacific	0375, 0027	Schaub Lorenz	0375, 0027, 0131,
Palladium	0064, 0375, 0099, 0068	0342, 0133, 0068
Palsonic	0027, 0099	Schneider	0108, 0305, 0064, 0375,
Panasonic	025311891062	0027, 0099, 0379, 0069,
Pathe Cinema	0070	0173, 0267
Pathe Marconi	0068	Scott	0070
Penney	0064, 0069, 0267, 00651062	Sears	0064, 0027, 0131, 0069,
Pentax	0069	0074, 0073
Perdio	0027	Seaway	0305
Philco	0099, 0065	SEG	0108, 0305, 0099, 0267
Philips	0108, 0411, 0173, 0494,	SEI	0108
.....	04301367	Sei-Sinudyne	0108
Phoenix	0305	Seleco	0064, 0411, 0068
Phonola	0108	Semp	0072
Pilot	0064	Sentra	0099
Pioneer	0108, 0094, 0069	Setron	0099
Portland	0305	Sharp	0064, 0075, 0834
Prinz	0027	Shintom	0099, 0131
Profitronic	0108, 0267	Shivaki	0064
Proline	0305, 0027, 0347, 0348	Siemens	0108, 0064, 0347, 0131,
Proscoc	0305	0222, 0073, 0173, 0374
Prosonic	0305	Siera	0108
Protech	0108	Silva	0064
ProVision	0305	Silver	0305
Pye	0108	Singer	0072
Quartz	0073	Sinudyne	0108, 0379
Quasar	030511891062	Smaragd	0375
Quelle	0108	Sonneclair	0099
Radialva	0108, 0064, 0099, 0075	Sonolor	0073
Radiola	0108	Sontec	0064
Radionette	0064	Sony	0027, 0059, 01331059
RadioShack	0064, 0027	Soundwave	0064, 0375
Rank	0068	Ssangyong	0099
Rank Arena	0068	Standard	0305
RCA	0347, 0075, 0069, 02671062	Stern	0305
Realistic	0064, 0027, 0131, 0075,	Sunkai	0305, 0375, 0322

VCR

CODELIST

Codes

VCR

Sunstar.....	0027	Wards.....	0108, 0027, 0099, 0072,
Suntronic.....	0027	0075, 0069, 0267, 0074,
Sunwood.....	0099	0065, 0073
Supra.....	0064	Watson.....	0108, 0379
Sylvania.....	0108, 0070	Weltblick.....	0064
Symphonic.....	0027	White Westinghouse.....	0305, 0099
Tandberg.....	0305	World.....	0375
Tandy.....	0027, 0131	Yamaha.....	0065
Tashiko.....	0108, 0064, 0027, 0075,	Yamishi.....	0305, 0099
.....	0267	Yokan.....	0099
Tatung.....	0108, 0375, 0027, 0379,	Yoko.....	0064, 0099, 0267
.....	0075, 0070, 0068	Zenith.....	0027
Tchibo.....	0375	ZX.....	0375, 0379
TCM.....	0375		
Teac.....	0305, 0064, 0027, 0334,		
.....	0068		
Tec.....	0099		
Tech Line.....	0099		
Technics.....	0108, 02531189		
TechniSat.....	0375		
Teknika.....	0064, 0027		
Teleavia.....	0068, 0214		
Telefunken	0305, 0347, 0411, 0348,		
.....	0214, 0068, 0233		
Teletech.....	0305, 0027, 0099		
Tenosal.....	0099		
Tensai.....	0305, 0027, 0099		
Tevion.....	0375		
Texet.....	0305		
Thomas.....	0027		
Thomson.....	0305, 0347, 0411, 0094,		
.....	0348, 0068		
Thorn.....	0064, 0131, 0068		
Tokai.....	0064, 0099, 0131, 0068		
Topline.....	0375		
Toshiba.....	0108, 0411, 0379, 0072,		
.....	0070, 0459, 0068		
Totevision.....	0064		
Towada.....	0099		
Tradex.....	0108		
Triumph.....	0235		
Uher.....	0267		
Ultravox.....	0305		
Unitech.....	0267		
United.....	0375		
United Quick Star.....	0305		
Universum	0108, 0064, 0375, 0027,		
.....	0131, 0133, 0222, 0430,		
.....	0267		
Victor.....	0094		
Video Concepts.....	0072		
Video Technic.....	0027		
Videomagic.....	0064		
Videosonic.....	0267		
Villain.....	0027		

VCR

CODELIST

Codes

DVD

**SETUP CODES FOR
DIGITAL VERSATILE DISC
(DVD)**

3DLAB.....	0566	Digired.....	0744
A-Trend.....	0741	Digitrex.....	0699
Acoustic Solutions.....	0757	Dinamic.....	0815
AEG.....	0797, 0817, 0815	DiViDo.....	0732
Aiwa.....	0560	DMTECH.....	0810
Akai.....	0817, 0815, 0743	Dual.....	0757, 0678, 0817, 0740, 0692, 0810
Alba.....	0566, 0722, 0757, 0699, 0740, 0810, 0726, 0744	Durabrand.....	0740
Amitech.....	0797	Elin.....	0797
Amstrad.....	0740	Elta.....	0797, 0717, 0699, 0815
Ansonic.....	0801	Emerson.....	0618, 0732
Apex Digital.....	06991031, 0744	Enterprise.....	0618
Arianet.....	0845	EuroLine.....	0815
Audiosonic.....	0717	Enzer.....	0692
Audiovox.....	0744	Fenner.....	0678
AWA.....	0757	Ferguson.....	0678
Axion.....	0757	Finlux.....	0768, 0618, 0797, 0699, 0810
Baze.....	0699	Firstline.....	0740
Bellagio.....	1031	Fisher.....	0697
Black Diamond.....	0740	Funai.....	0722
Blaupunkt.....	0744	GE.....	0744, 0549
Blue Sky.....	0722, 0678, 0699, 0740	Global Solutions.....	0795
Boghe.....	1031	Global Sphere.....	0795
Boman.....	0810	GoVideo.....	0810
Brainwave.....	0797	GoldStar.....	0768, 0618
Brandt.....	0530, 0578, 0678	Goodmans.....	0757, 0678, 0817, 0717, 08101031, 0740
Broksonic.....	0722	GPX.....	0726
Bush.....	0722, 0757, 0716, 0726, 0699, 0744, 0717, 0740	Graetz.....	0692
Cat.....	0726	Grandin.....	0743, 0740
CCE.....	0757	Greenhill.....	0744
Centrex.....	0699	Grundig.....	0566, 0578, 0722, 0678, 0817, 0697, 07401031, 0732, 0802
Centrum.....	0740	Grunkel.....	0797
Cinetec.....	0740	H&B.....	0845, 0740
cineULTRA.....	0726	Hanseatic.....	0768, 0810
Classic.....	0757	HCM.....	0815
Clatronic.....	0699, 0845, 0815	HDT.....	0732
Clayton.....	0740	HE.....	0757
Coby.....	0757	HenØ.....	0740
Contel.....	0815	Hitachi.....	0600
Crown.....	0797, 0717	Hiteker.....	0699
CyberHome.....	0741	Home Electronics.....	0757
Cytron.....	0801, 0678, 0732, 0743	Humax.....	0673
Daewoo.....	0797, 0741, 0732	Ingelen.....	0815
Dansai.....	0797, 0810	IRT.....	0810
Dantax.....	0817	ISP.....	0722
Decca.....	0797	Jaton.....	0692
Denon.....	0517, 0661	JDB.....	0757
Denver.....	0815, 0726, 0699	Jeken.....	0726
Denzel.....	0692	JMB.....	0722
Diamond.....	0678	JVC.....	0650, 0566, 05301967
Digihome.....	0740	Karcher.....	0810
		Kendo.....	0740, 0726

DVD

CODELIST

Codes

DVD

Kennex	0797	Palladium	0722
Kenwood	0517, 0764, 0561	Panasonic	05171935
Kihiro	0797	Panda	0744
Kingavon	0845	Philco	0815, 0717
Kiss	0692	Philips	0566, 0530, 067316741698
Koda	0845	Phonotrend	0726
Lawson	0795, 0743	Pioneer	0598
Lenco	0797, 0801, 0678, 0740,0726, 0699	Prism	0732
Lexia	0795, 0726	Proline	0713, 06781031, 0699
LG	0768, 0618	Proscan	0549
Lifetec	0678	Prosonic	0726
Limit	0795, 0743	ProVision	0726
Loewe	0566	Radionette	0768
Logix	0810, 0732	Raite	0692
Lumatron	0732	RCA	0549
Luxman	0600	REC	0517, 0716
Luxor	1031	Red Star	0797, 0815
Magnavox	0530	Reoc	0795
Manhattan	0732, 0740	Revoy	0726
Marantz	0566	Roadstar	0757, 0716, 0740, 0699,0726, 0845, 0717
Mark	0740	Rotel	0650
Marquant	0797	Rowa	0744
Matsui	0722, 0678, 06991031, 0740	Saba	0578, 0678
Maxim	0740	Salora	0768
MBO	0757, 0717	Samsung	0517, 0600
Mecotek	0797	Sansui	0722, 0795
Medion	0657, 0801, 0678, 0743,0810	Sanyo	0697
Metronic	0717	Scan	0732
Metz	0598, 0740	ScanMagic	0757
Microboss	0745	Schaub Lorenz	0797, 0815
Micromedia	0566, 0530	Schneider	0566, 0801, 0678, 0817,0732, 0815, 0810
Micromega	0566	Scientific Labs	0795
Microsoft	0549	Scott	0678, 0745, 0699
Minax	0740	SEG	0795, 0740, 0692
Minerva	0732	Shanghai	0699
Minoka	0797	Sharp	0657
Mitsubishi	0740	Sherwood	0768, 0744
Mizuda	0845	Shinco	0744
Monyka	0692	Silva	0815
Mustek	0757	Skymaster	0757, 0795
Mx Onda	0678	Slim Devices	0560
NAD	0768	SM Electronic	0757, 0795, 0717
Naiko	07971031	Smart	0740, 0732, 0745
Neufunk	0692	Sonic Blue	0810
Nevir	0797	Sony	0560, 06001931
Nordmende	0801	Soundmaster	0795
Olidata	0699	Soundwave	0810
Onkyo	0530, 0654	Standard	0795, 0678, 0815
Orava	0845	Starmedia	0845
Orion	0722	Sunkai	0797
Oritron	0678	Sunwood	0815
Ormond	0740	Supervision	0795
P&B	0845	SVA	0699
Pacific	0795, 0817, 0740	Synn	0795

DVD

CODELIST

Codes

DVD

Tandberg.....	0740
Tatung.....	0797
Teac.....	0768, 0795, 0817, 0744
Technics.....	0517
Technika.....	0797
Techwood.....	0740
Teletech.....	0795, 0740
Tensai.....	0797, 0678, 0717
Tevion.....	0678
Theta Digital.....	0598
Thomson.....	0578, 0549
Tokai.....	0817, 0815, 0692
Tokiwa.....	0743
Toshiba.....	0530
Umax.....	0717
United.....	0757, 0699, 0815
Universum.....	0768, 0618, 0740
Venturer.....	0817
Vestel.....	0740
Vieta.....	0732
Voxson.....	0757
Walkvision.....	0744
Wellington.....	0740
Wesder.....	0726
Wharfedale.....	0713, 0817
Windy Sam.....	0600
Xbox.....	0549
Xenius.....	0817
XLogic.....	0795
Yakumo.....	1031
Yamada.....	1031
Yamaha.....	0517, 0566, 0673
Yamakawa.....	0692
Yukai.....	0757
Zenith.....	0530, 0618

DVD

CODELIST

Quick, Clean & Easy Setup
www.philips.com/urc