

SECTION 1 GENERAL

The operating instructions mentioned here are partial abstracts from the 'Operating Instruction Manual'. The page numbers of the 'Operating Instruction Manual' remain as in the manual.

Switching On the TV and Automatically Tuning

 
1 The first time you switch on your TV, a sequence of menu screens appear on the TV enabling you to: 1) choose the language of the menu screen, 2) choose the country in which you wish to operate the TV, 3) adjust the picture slant 4) search and store all available channels (TV Broadcast) and 5) change the order in which the channels (TV Broadcast) appear on the screen.

However, if you need to change any of these settings at a later date, you can do that by selecting the appropriate option in the **Set Up** menu) or by pressing the **Auto Start Up** Button **▶▶▶** on the TV set.


1 Connect the TV plug to the mains socket (220-240V AC, 50Hz)

The first time that the TV set is connected, it is usually turned on. If the TV is off, press the **▶▶▶** on/off button on the TV set to turn on the TV.

The first time you switch on the TV, a **Language** menu displays automatically on the TV screen.

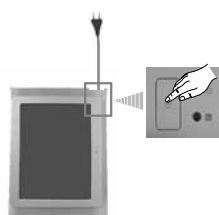

 
2 Press the **▶** or **◀** button on the remote control to select the language, then press the **OK** button to confirm your selection. From now on all the menus will appear in the selected language.



3 The **Country** menu appears automatically on the TV screen. Press the **▶** or **◀** button to select the country in which you will operate the TV set, then press the **OK** button to confirm your selection.

1 • If the country in which you want to use the TV set does not appear in the list, select **“-”** instead of a country.

 
• In order to avoid wrong teletext characters for Cyrillic languages we recommend to select Russia country in the case that your own country does not appear in the list.

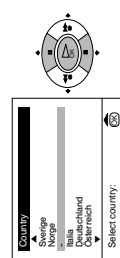

4 Because of the earth's magnetism, the picture might slant. The **Picture Rotation** menu allows you to correct the picture slants if it is necessary.


a) If it is not necessary, press **▶** or **◀** to select **Not necessary** and press **OK**.

 b) If it is necessary, press **▶** or **◀** to select **Adjust now**, then press **OK** and correct any slant of the picture between **-5** and **+5** by pressing **▶** or **◀**. Finally press **OK** to store.



continued...


 
5 The **Auto Tuning** menu appears on the screen. Press the **OK** button to select **Yes**.



6 The TV starts to automatically search and store all available broadcast channels for you.

A This procedure could take some minutes. Please be patient and do not press any buttons, otherwise the automatic tuning will not be completed.

  A If no channels were found during the auto tuning process then a new menu appears automatically on the screen asking you to connect the aerial. Please connect the aerial (see page 6) and press **OK**. The auto tuning process will start again.



7 **1** After all available channels are captured and stored, the **Programme Sorting** menu appears automatically on the screen enabling you to change the order in which the channels appear on the screen.

 
 
a) If you wish to keep the broadcast channels in the tuned order, go to step 8.

b) If you wish to store the channels in a different order:

1 Press the **▶** or **◀** button to select the programme number with the channel (TV Broadcast) you wish to rearrange, then press the **▶** button.

2 Press the **▶** or **◀** button to select the new programme number position for your selected channel (TV Broadcast), then press **◀**.

3 Repeat steps b)1 and b)2 if you wish to change the order of the other channels.

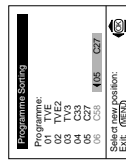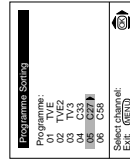

8 Press the **MENU** button to remove the menu from the screen.



1 Your TV is now ready for use