


AKAI 2133, 2122; START 1422

COLOUR TV SCHEMATIC DIAGRAM

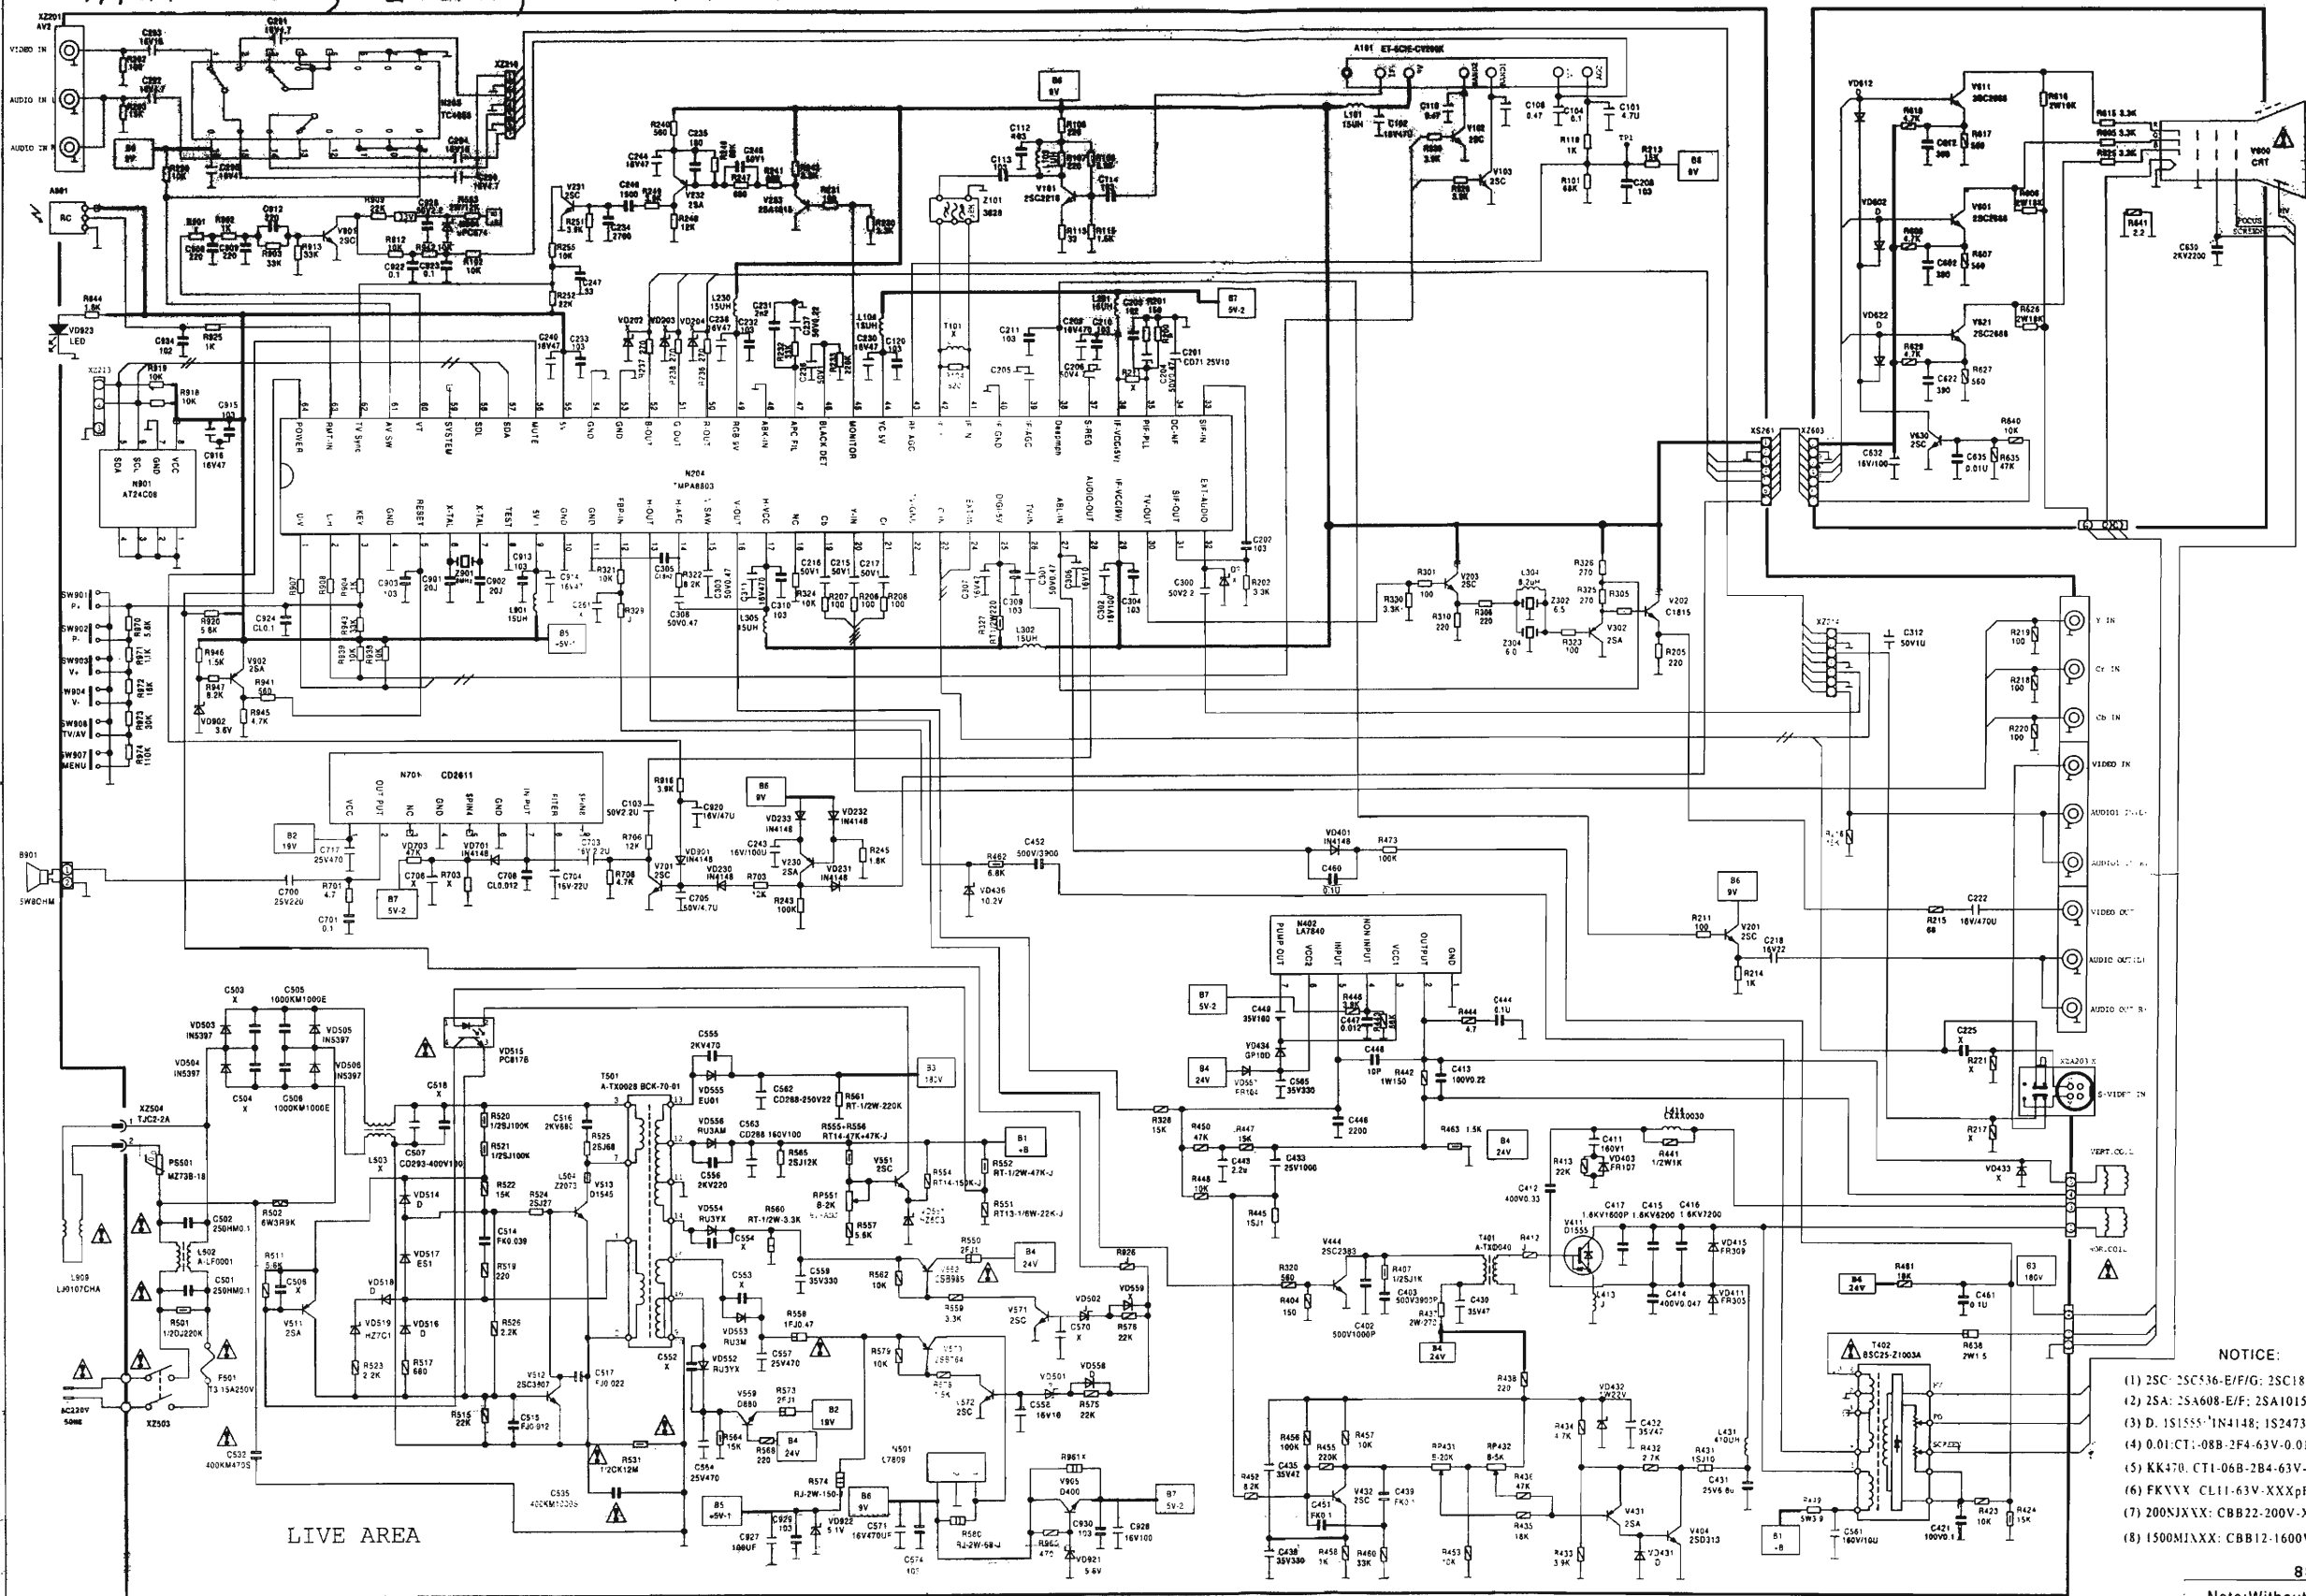

LIVE AREA

- NOTICE:
- (1) 2SC-2SC536-E/FIG; 2SC1815-O/Y/GR;
 - (2) 2SA: 2SA608-E/F; 2SA1015-O/Y/GR;
 - (3) D: 1S1555-1N4148; 1S2473; 1S2076; D5442;
 - (4) 0.01:CT1-08B-2F4-63V-0.01uF-Z;
 - (5) KK470; CT1-06B-2B4-63V-470pF-K
 - (6) FKXXX CL11-63V-XXXpF-K
 - (7) 200NXXX: CBB22-200V-XXXpF-J
 - (8) 1500MXXX: CBB12-1600V-XXXpF-J

Note: Without notification for any specification change!